


The fitting of the appliance should only be carried out by a authorised person/licensed gasfitter. Please read the safety regulations. See the data plate for information regarding the total gas consumption, gas type and gas pressure.


# **622399** en (06-18


### **Preparations for installation**

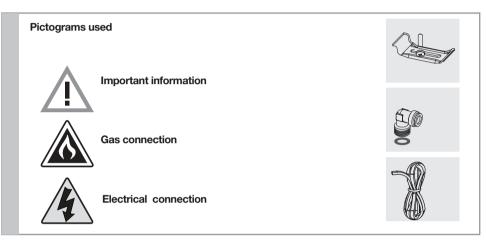


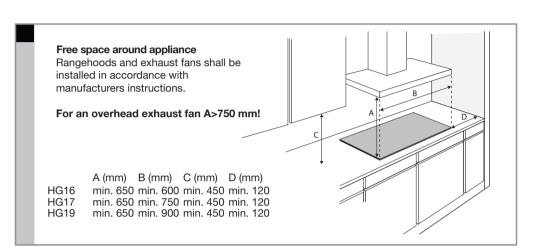


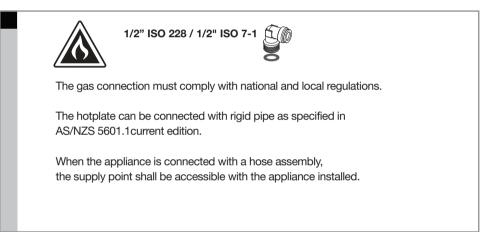


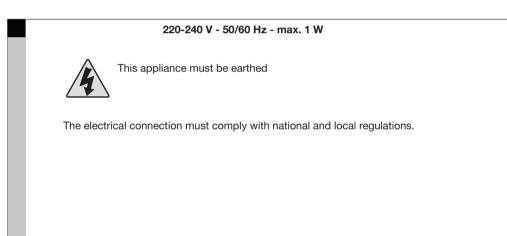

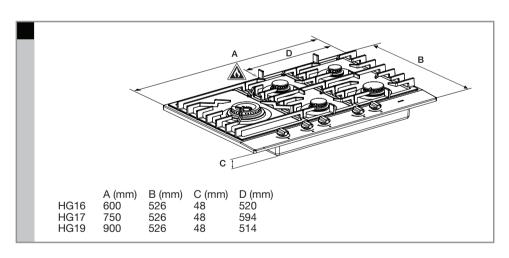


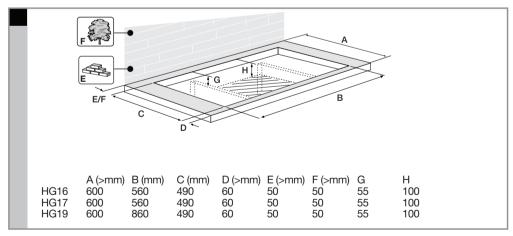

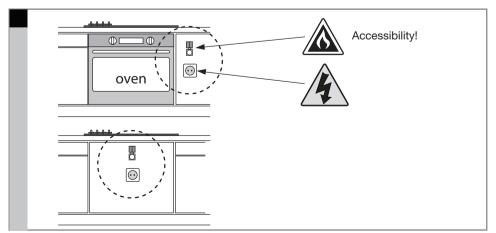

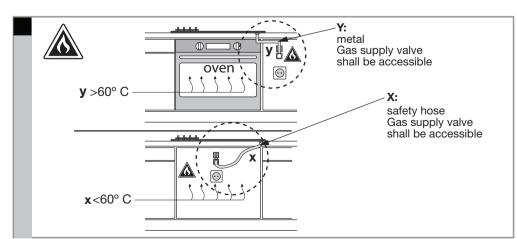


### Placing sealing tape

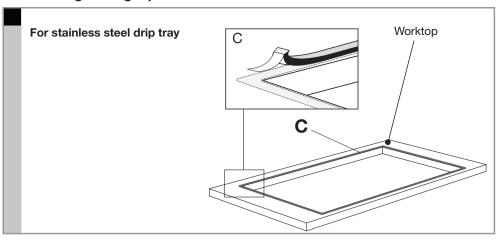





# Gas connection

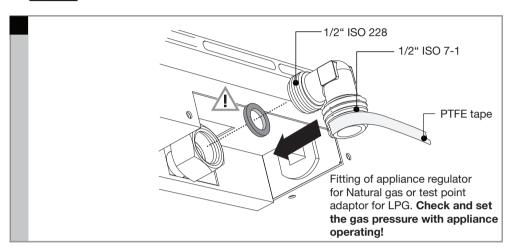



## **Building in**

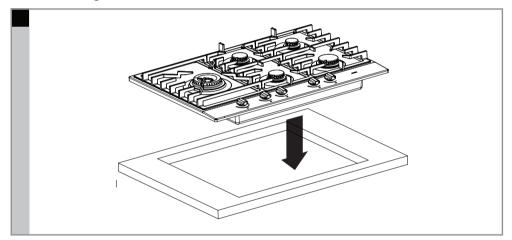

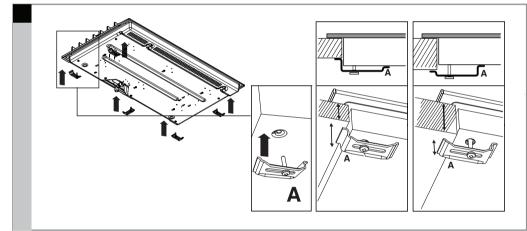

# Connecting and testing

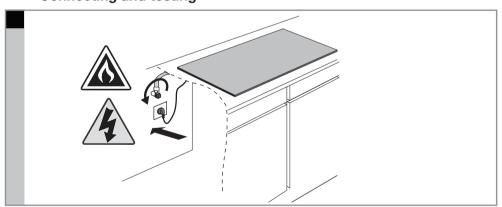

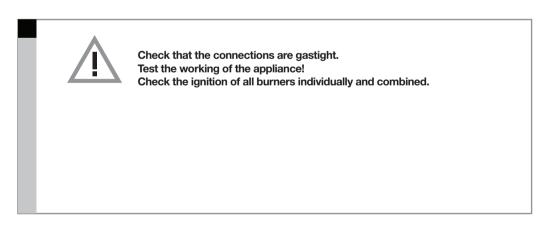



	Small	Medium	Large	Wok
HG16	1	2	-	1
HG17	1	2	1	1
HG19	1	2	1	1
	•	_		

Gas	Burner	Injector burner (mm)	Adj. Screw (mm)	Burner rate (MJ/h)	Gas pressure (kPa)
Natural gas (NG)	Small	0.90	0.45	4.00	
	Medium	1.17	0.60	6.70	1.0
	Large	1.31	0.65	8.60	
	Wok	1.70 + 0.66	0.60	15.70	
ULPG	Small	0.46	0.26	2.60	
	Medium	0.60	0.30	4.90	2.75
	Large	0.72	0.36	7.10	2./5
	Wok	0.93 + 0.40	0.40	13.60	